




GARAGE STORAGE SYSTEM INSTALLATION INSTRUCTIONS

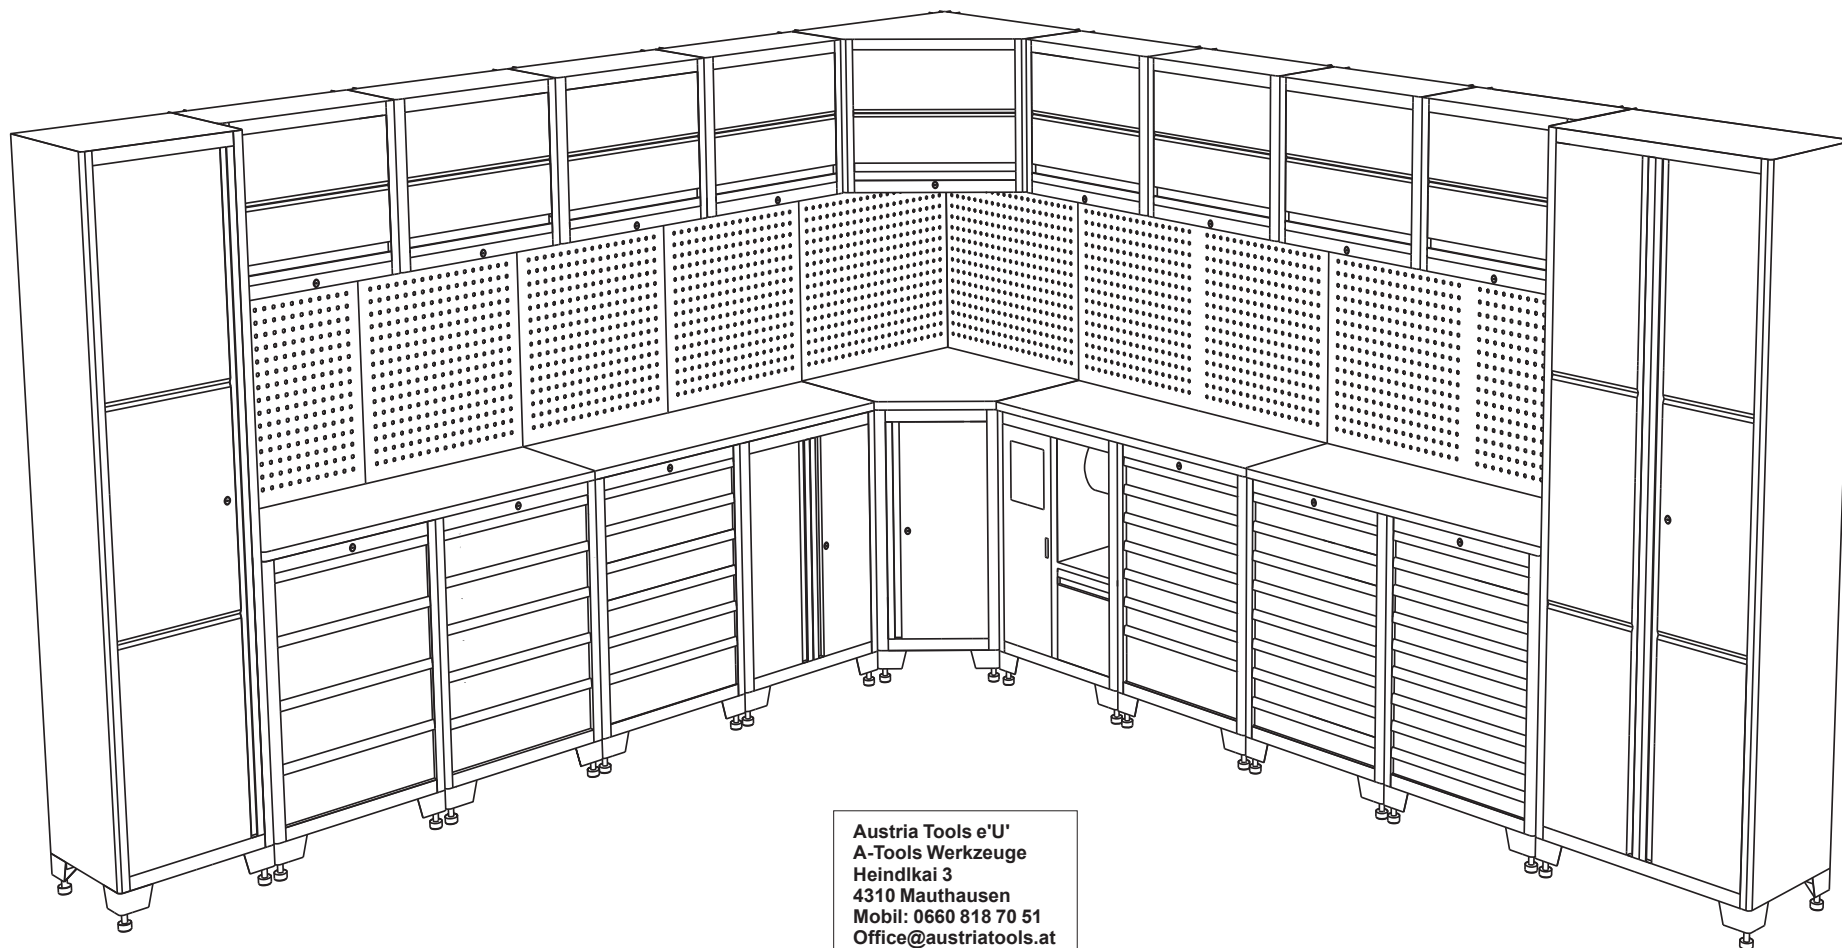


Austria Tools e'U'
A-Tools Werkzeuge
Heindlkai 3
4310 Mauthausen
Mobil: 0660 818 70 51
Office@austriatools.at
www.werkzeugonline.at








HARDWARE CONTENTS

NO.	DESCRIPTION	QTY.
A	M5X20	32
B	M6X16	400
C	M6	80
E	 M8-180P M6-140P	320
F	 M8-180P M6-140P	320

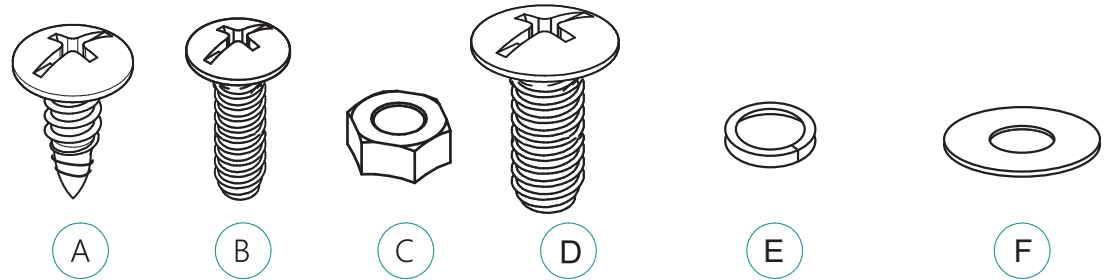




RECOMMENDED TOOLS FOR INSTALLATION

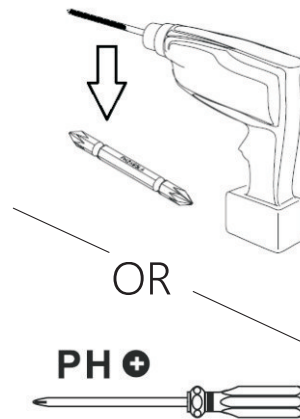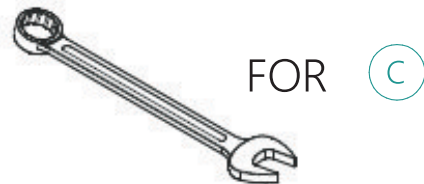


	M6X16	148
	M8	148
	M6X20	148


Step 1: Install adjustable & fixed legs under all cabinets by M6 X 16 & M8 X 20 bolts

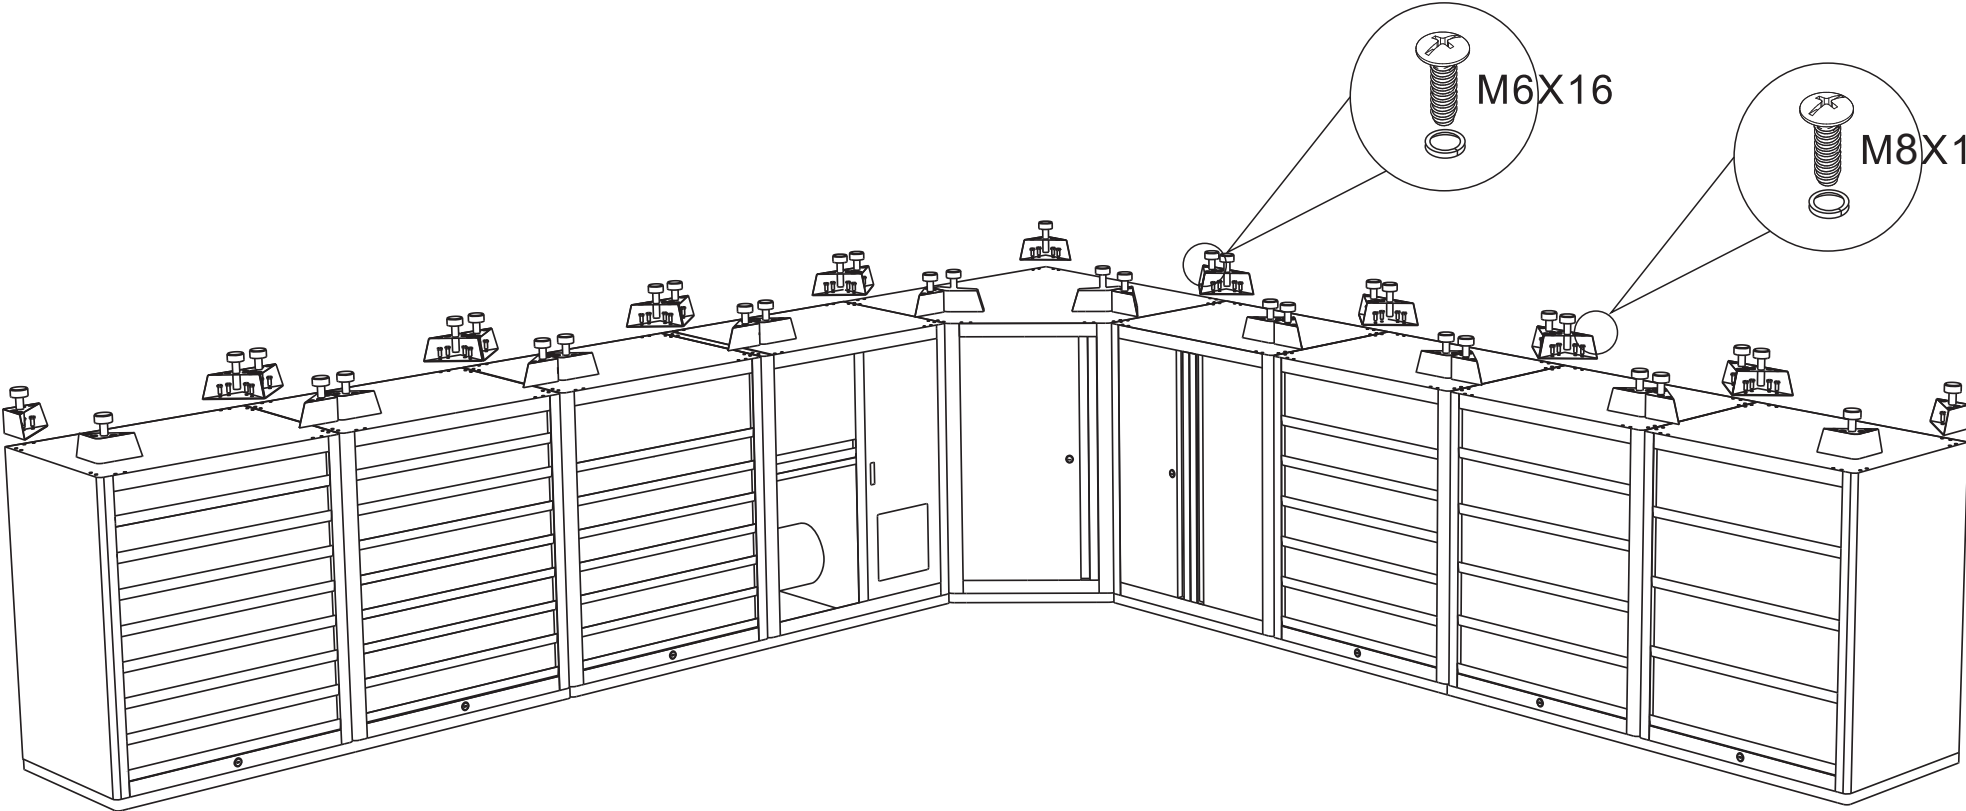


1		M6X16	40
2		M6	40

Step 2: Connect and fix the cabinets by M6 X 16 screws and nuts.

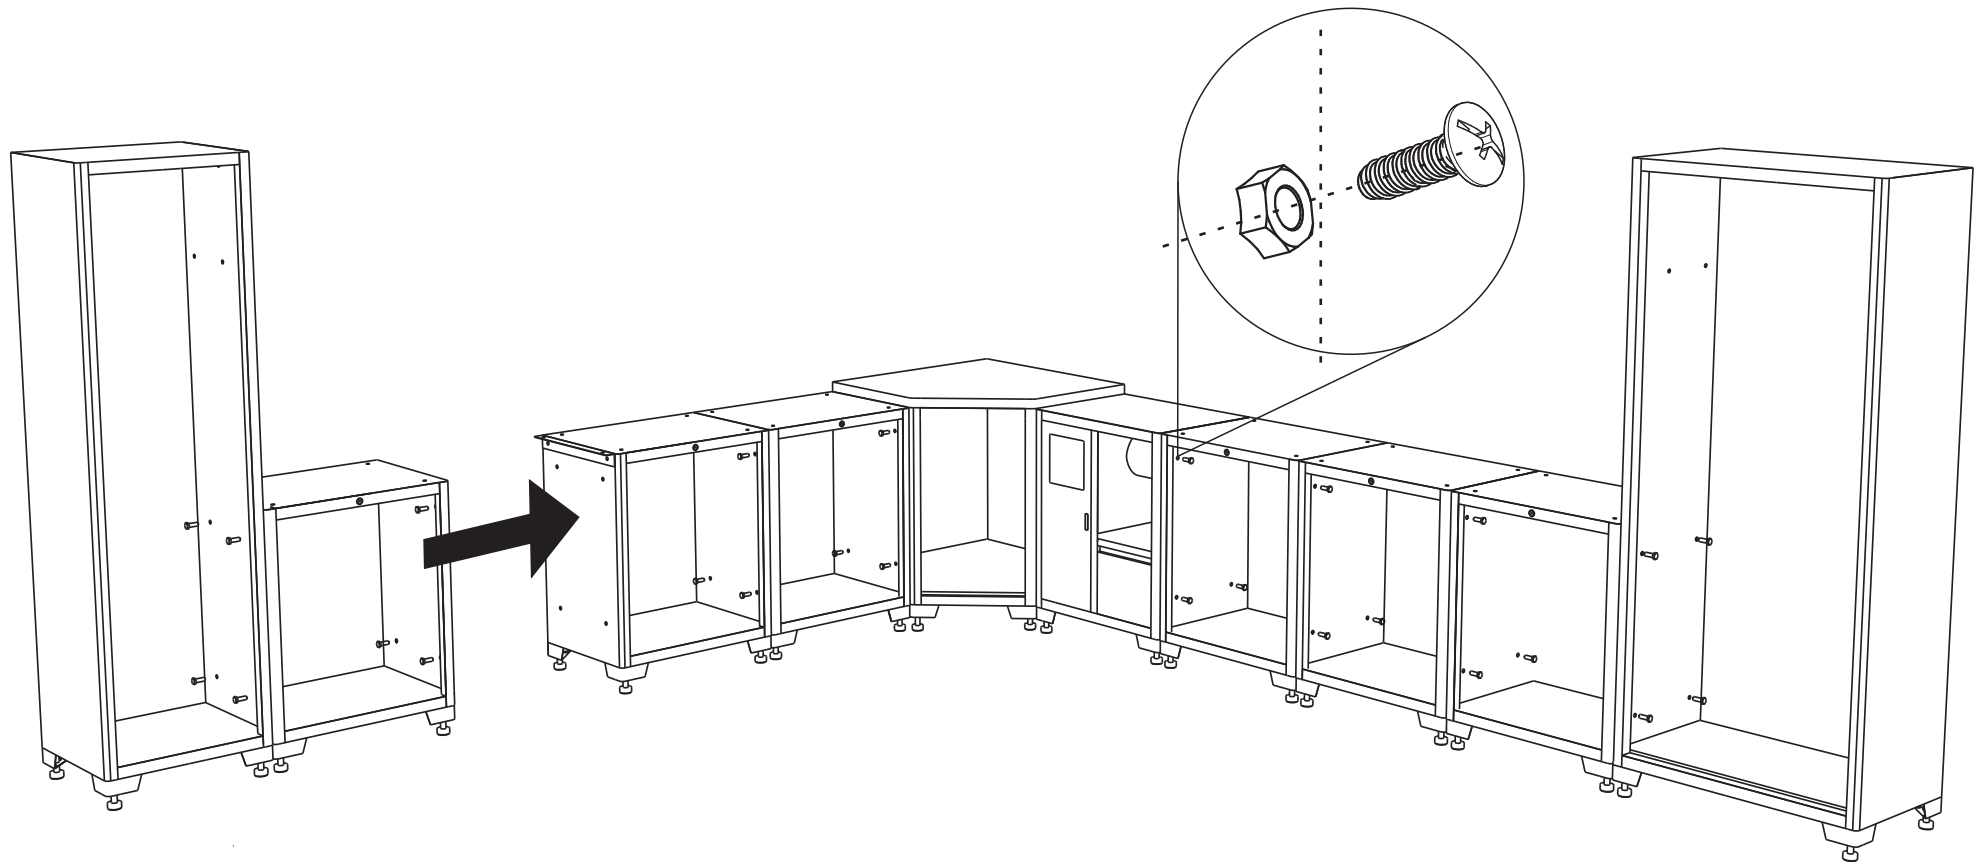


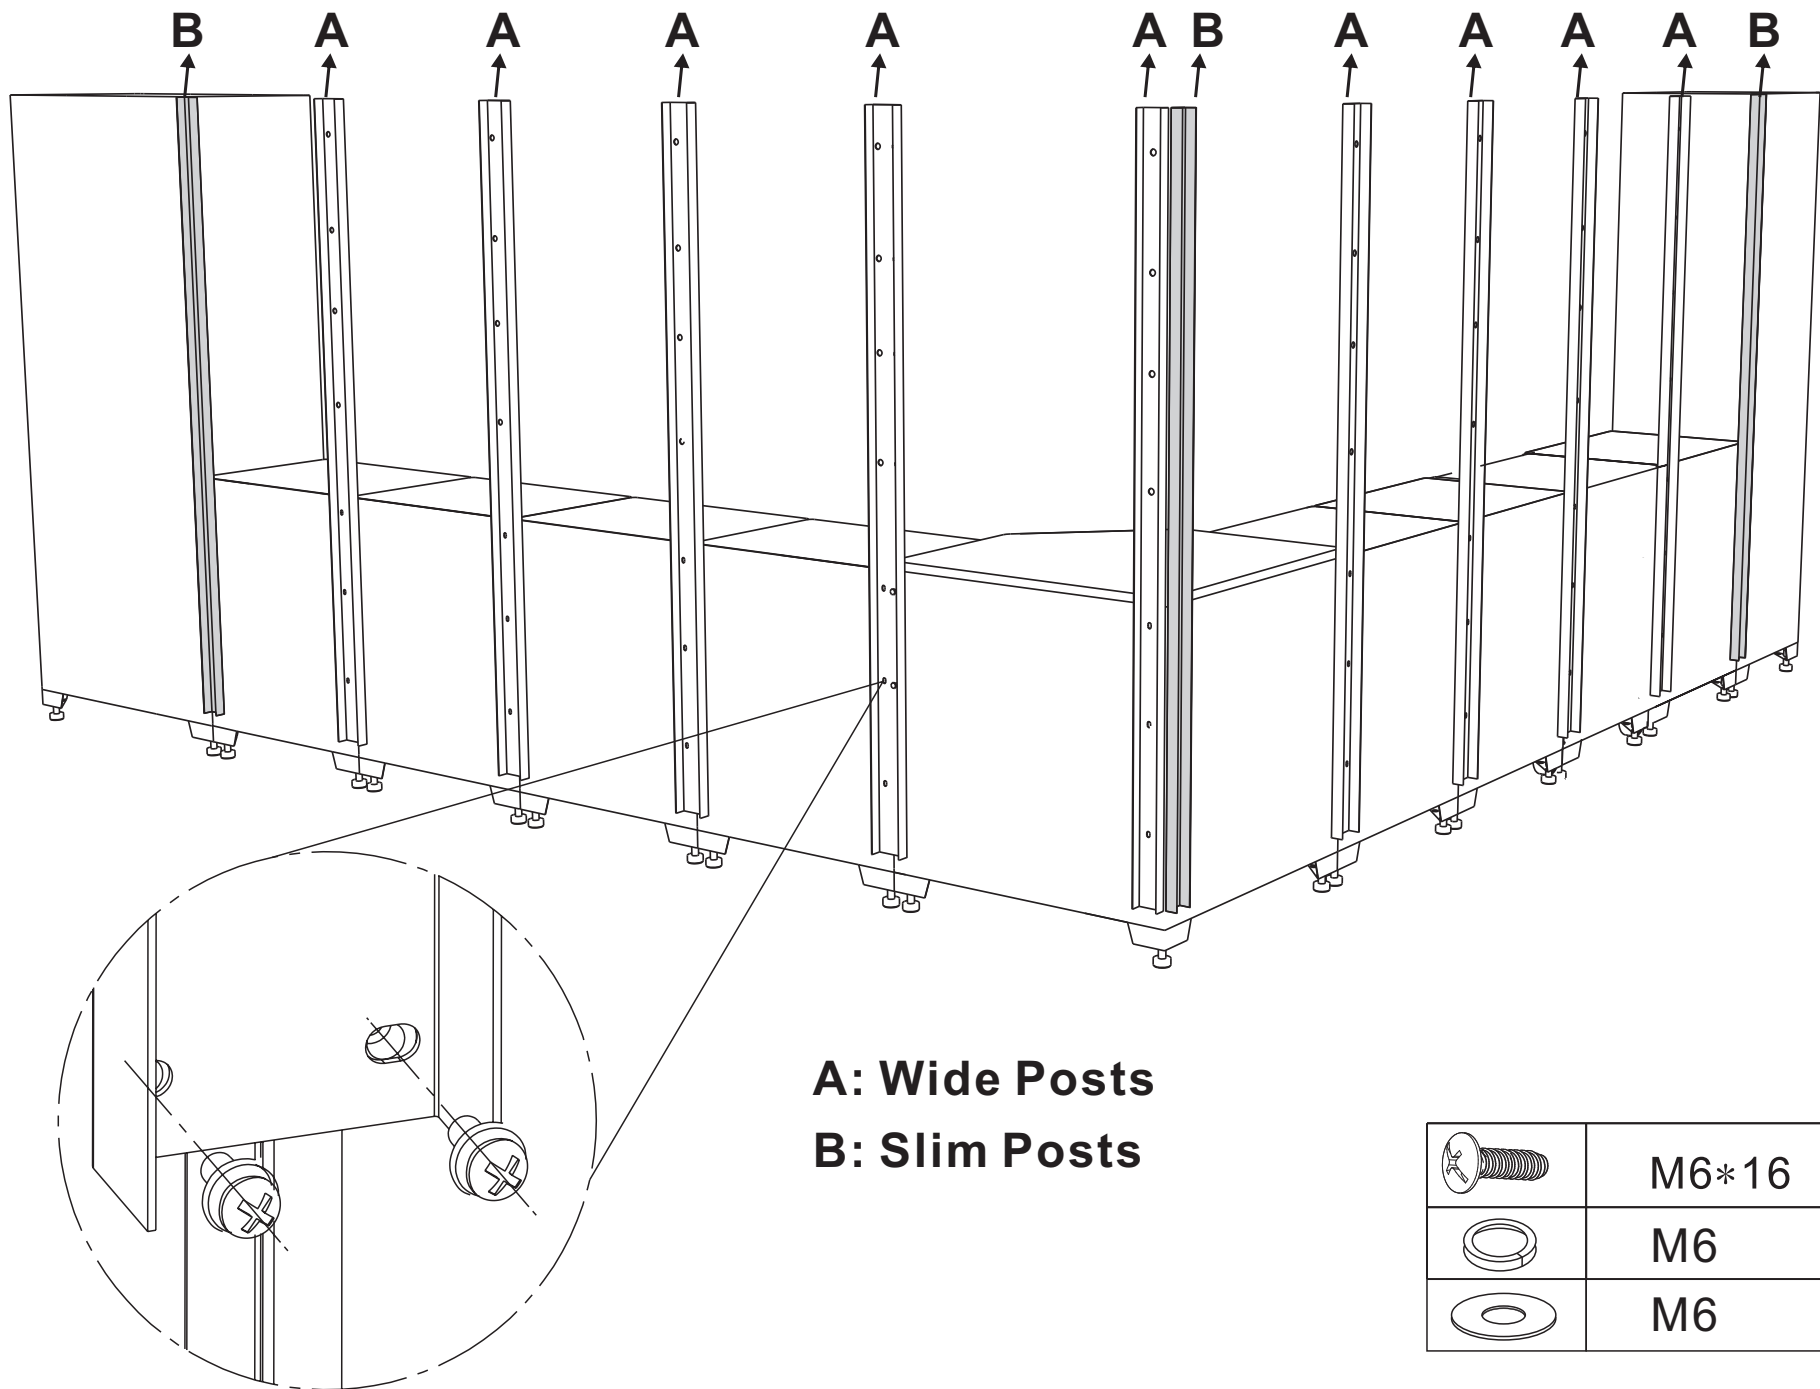

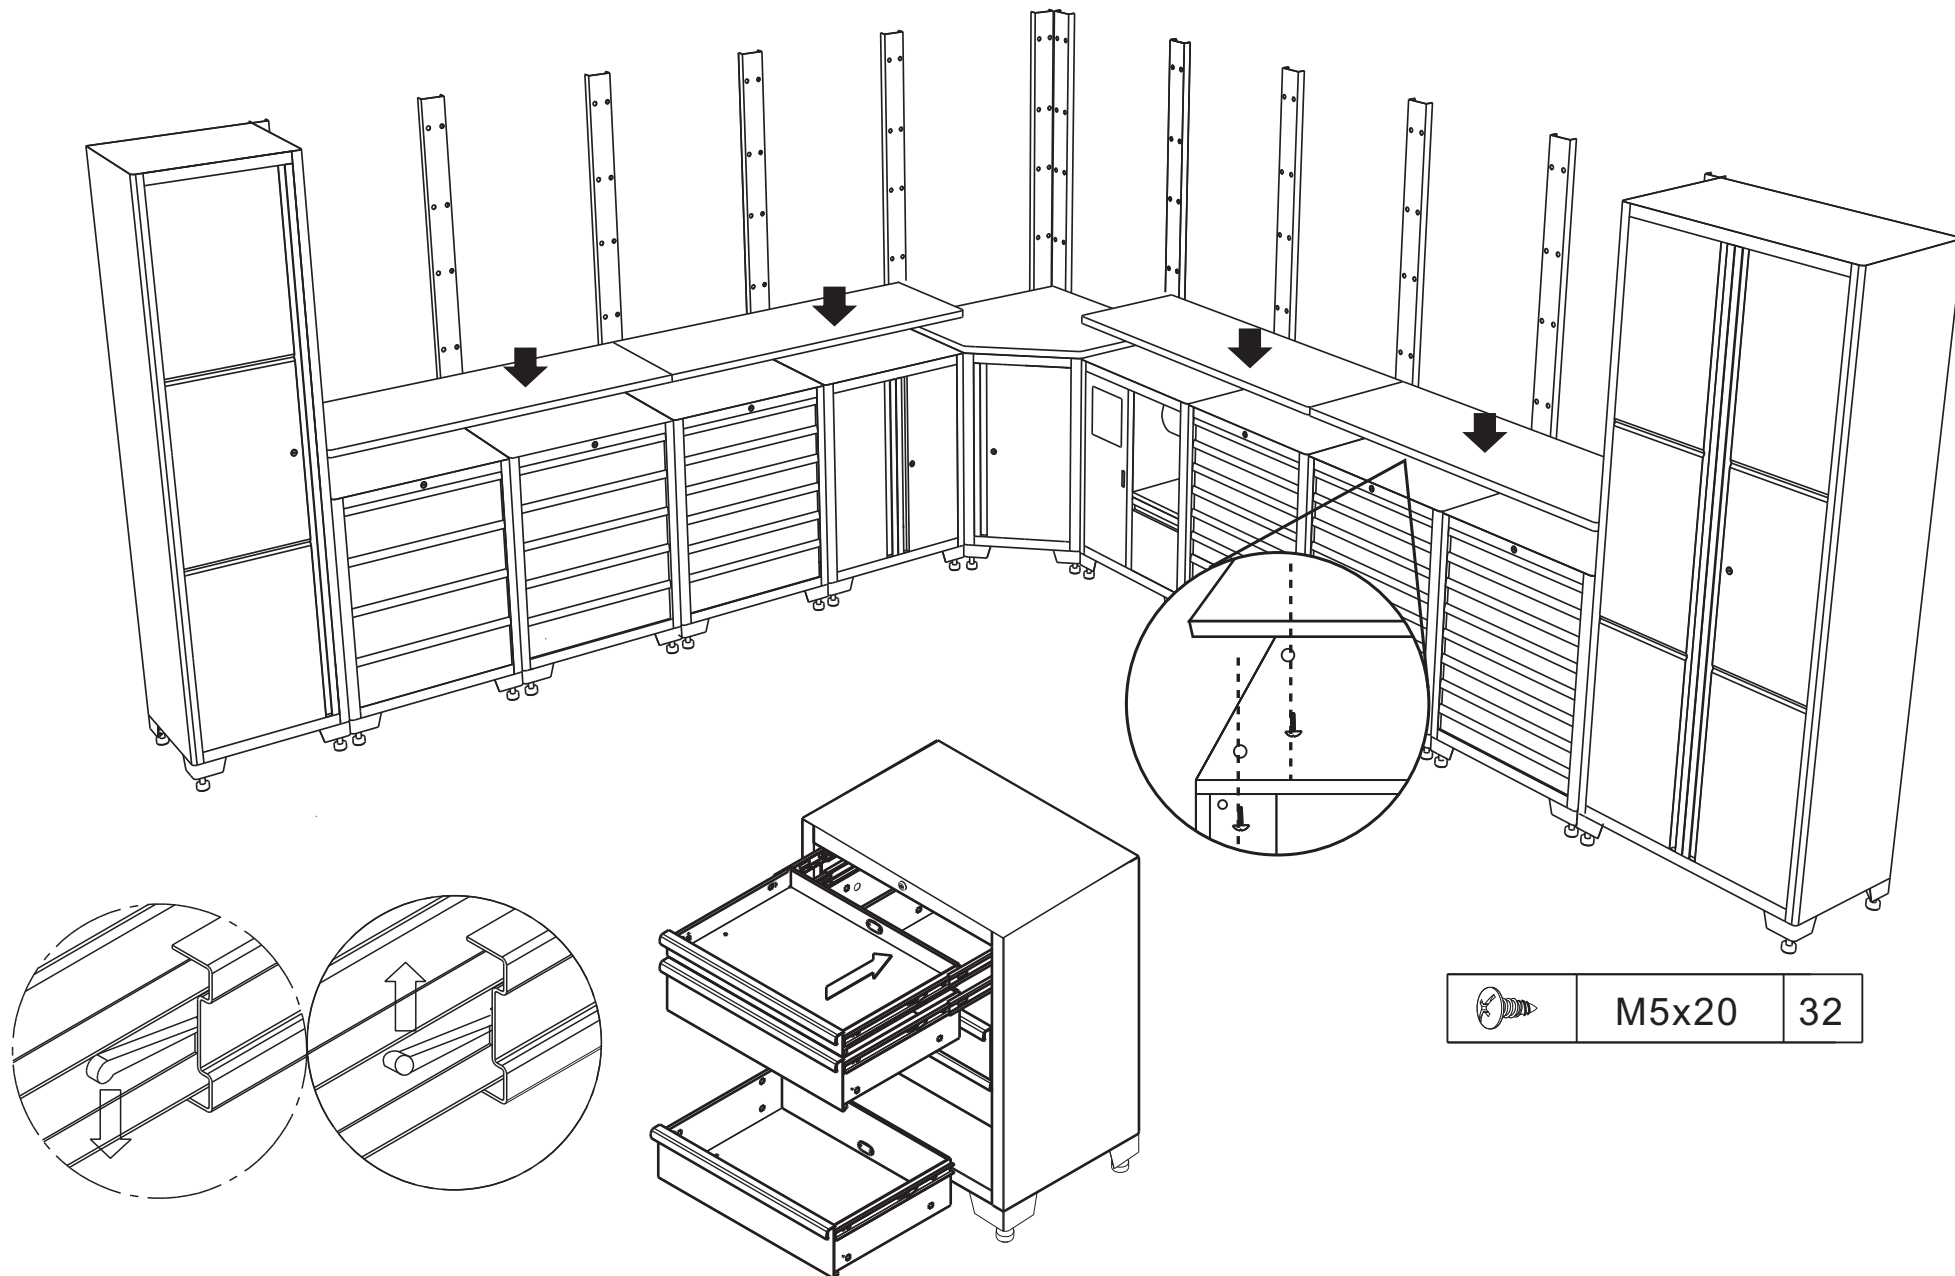


Step 3: Install 12 posts at the rear of the units by M6x16 bolts and make sure back panels are in middle of two cabinets.


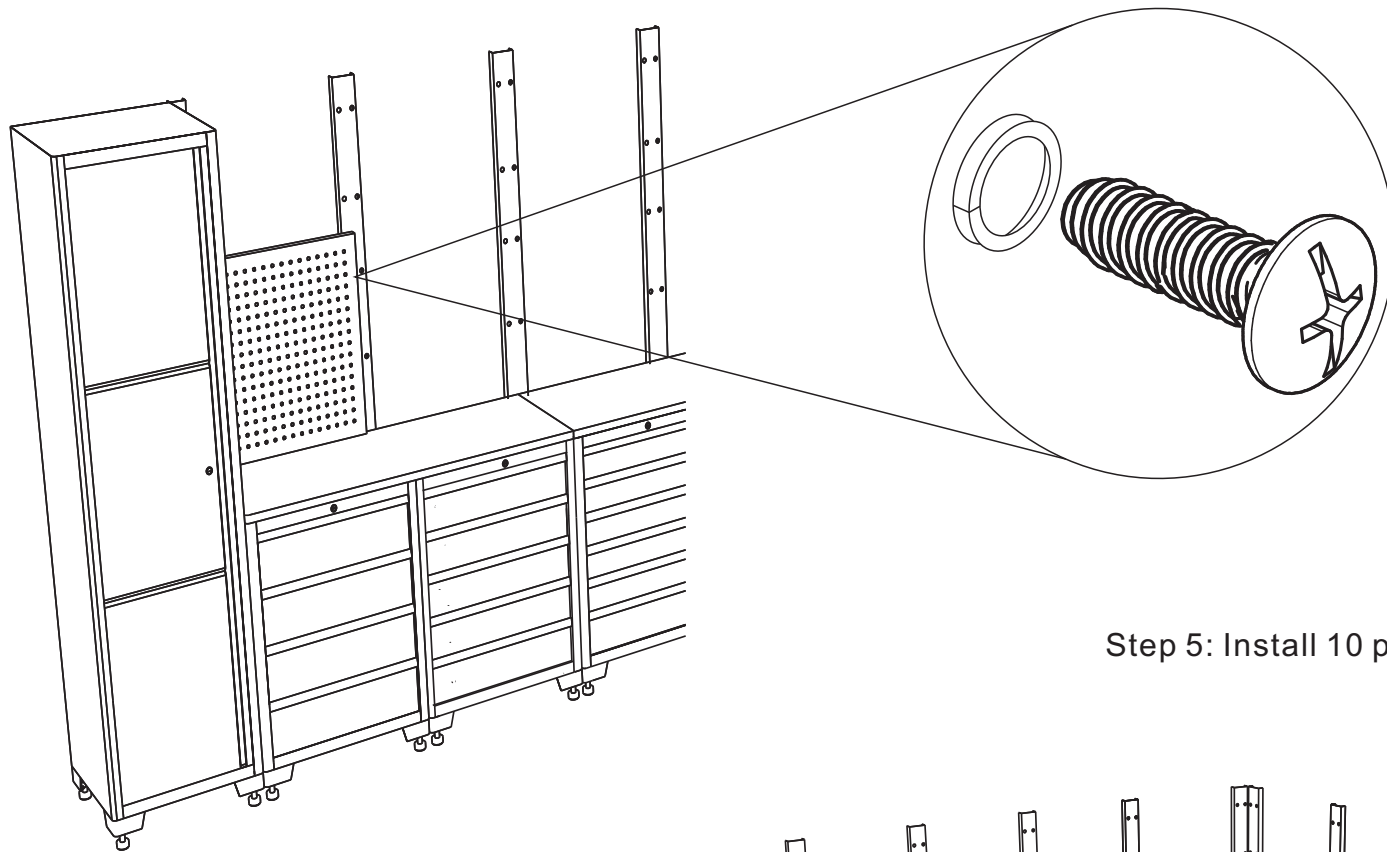



Step 4: Fix 4 rubber wood boards by M5 X 20 screws.




	M6	40
	M6*16	40
	M6	40

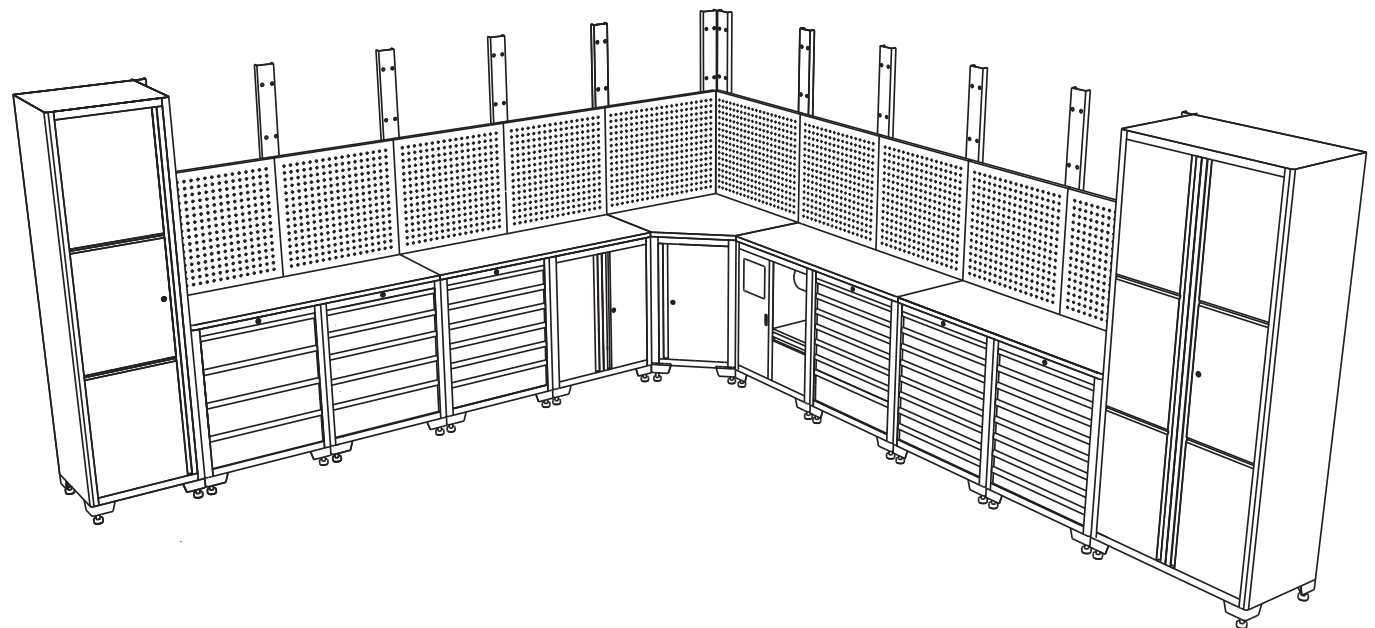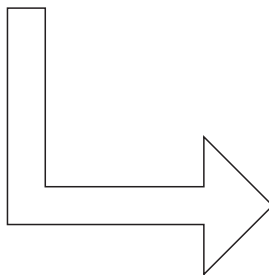


Step 5: Install 10 perforated panels by M6 X 16 bolts.





	M6*16	40
	M6	40

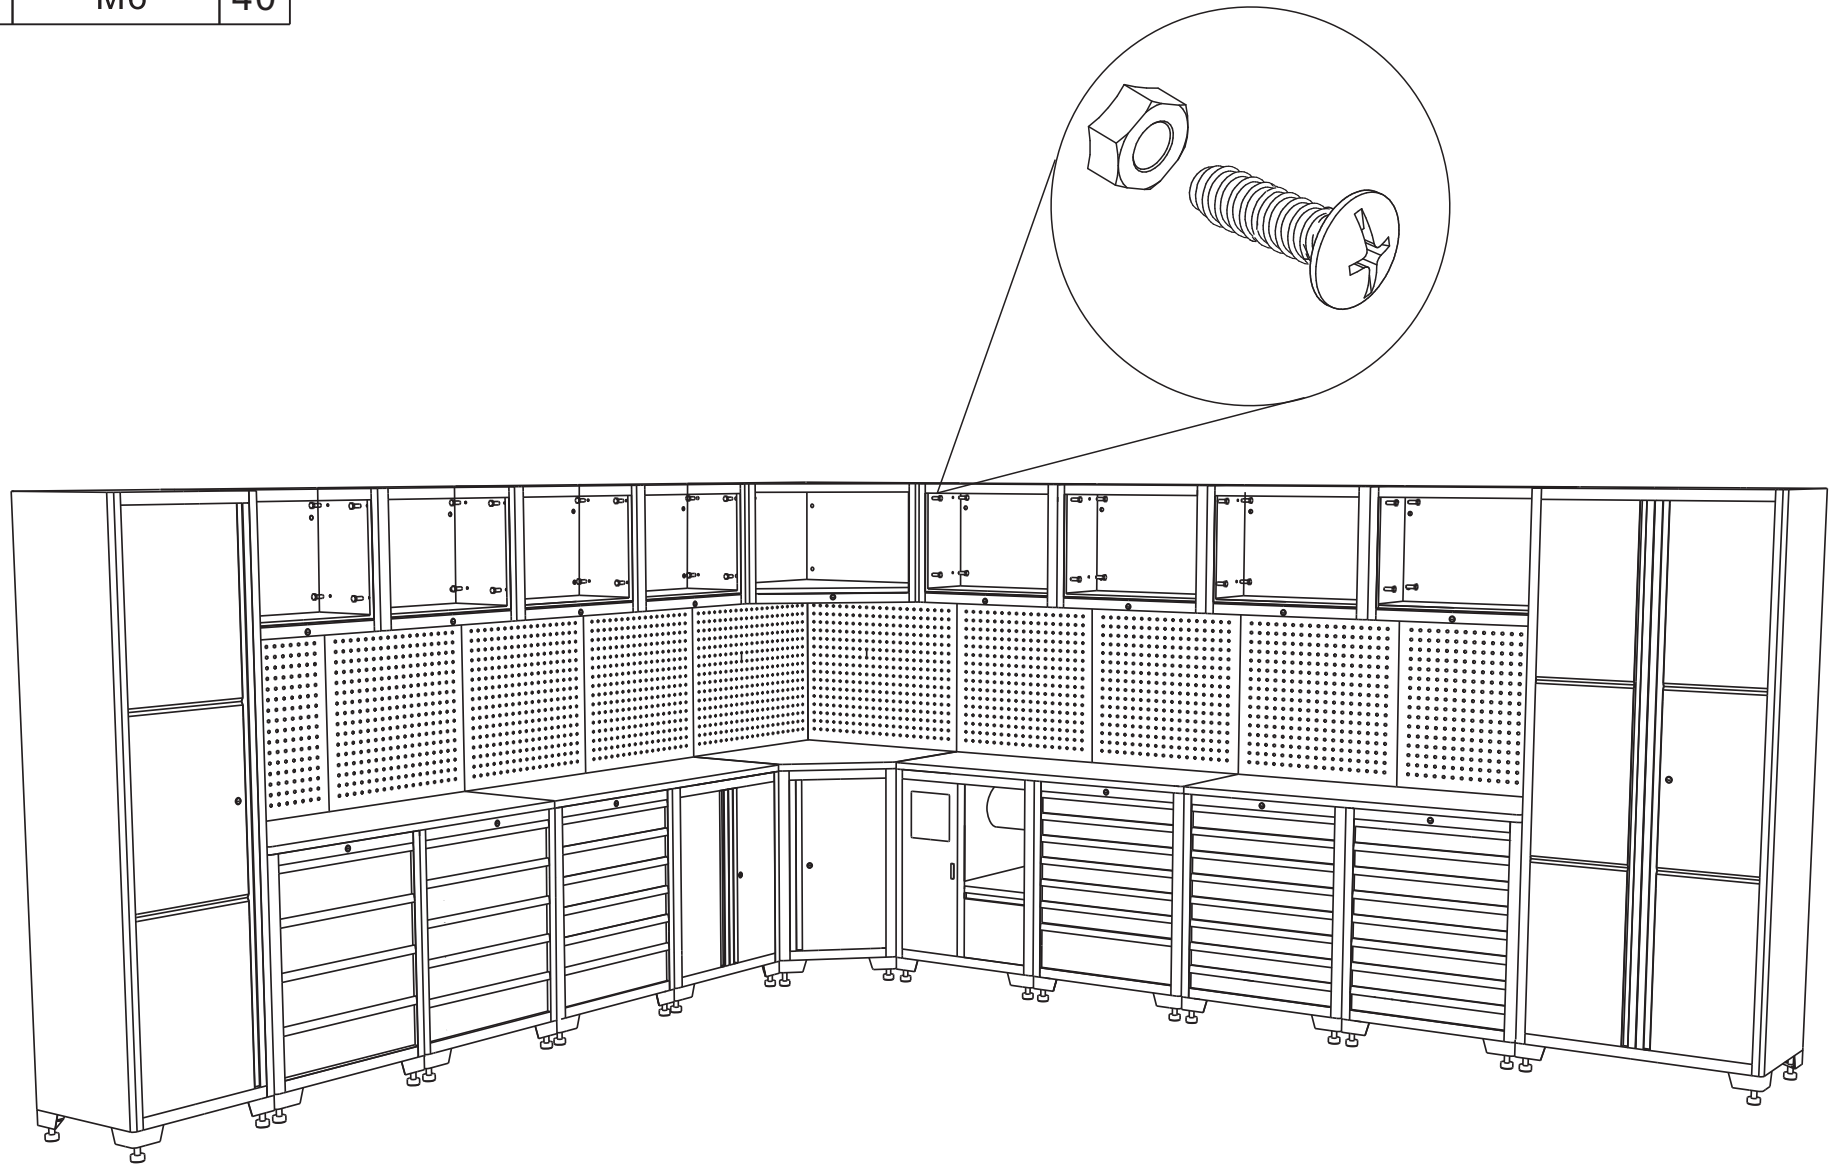Step 6: Connect 9 upper cabinets using M6 X 16 screws and nuts. Then fix the upper cabinets by screws.



	M6*16	40
	M6	54
	M6	54

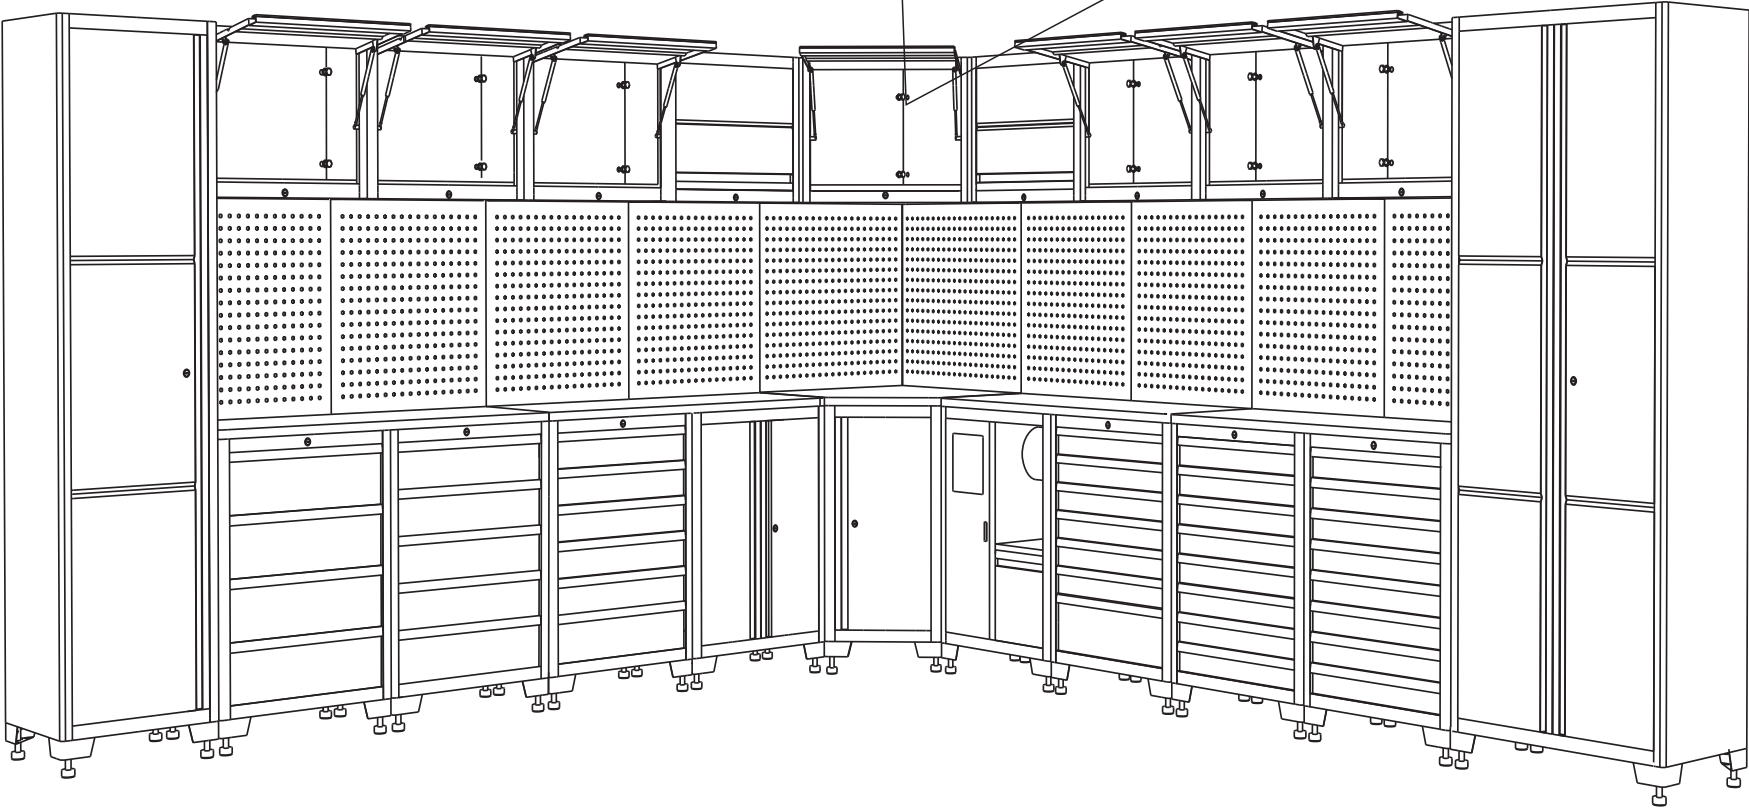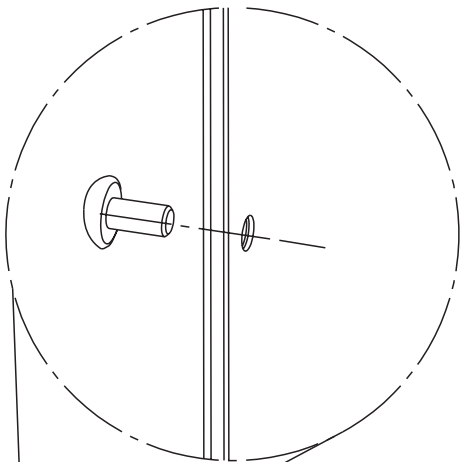

Step 7: Assemble 4 inner boards into the high cabinets, and 1 boards into the top cabinets.

